

Top Burner Flame Adjustment

Written for ranges manufactured between 2010 and Current (Gen. 3-5)

After initial connection or change of gas, it is **crucial** to modify this adjustment.

1. Ignite the HOB burner
2. Adjust knob to minimum setting
3. Remove the control knob
4. Move/rotate the ignition switch to expose the adjustment screw **J** and then use a small flathead screwdriver to set the screw.
5. You will see the flame reduce or increase in size as you turn the adjustment screw.

Note: Flame is reduced to 25% of its maximum size at the minimum setting; the burner must remain lit when quickly rotating the control knob from High to Low.

