


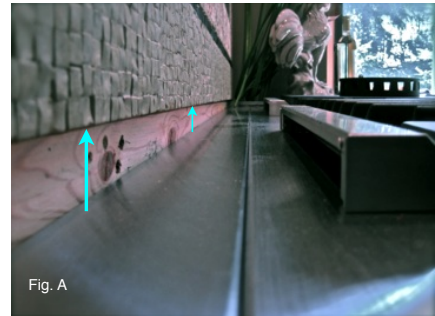

Island Style Spacer Installation

- The Island Backspacer is fastened to the back of the range's cooktop by two or more C-clamps depending on the width of the range. Simply attach the spacer and push the range up against the back wall.
- The island backspacer must be used with a non-combustible flame-retardant material (tile) installed on the wall above the cooking surface.
- Since the height of the range is adjustable, the spacer should be able to slide just under the backsplash material at the exact height of the counter surface (fig.A). Do not grout or cement the spacer into place, the range must retain the ability to pull away from the wall for future service.



Art Culinaire | Lacanche USA, 1701 1st Street, Snohomish, WA 98290
www.frenchranges.com 1-888-222-2930