




Lacanche Backsplash Install

Backsplash mounting brackets must be angled up to hook under the upper flange on the rear of the panel. Use drywall/screw inserts if studs or cabinet blocking behind the drywall is not accessible. Once backsplash is secured onto the mounting brackets, screw the bottom two corners and center of the panel to the wall surface to secure. The Backsplash must be installed prior to the installation of a hood directly above it.

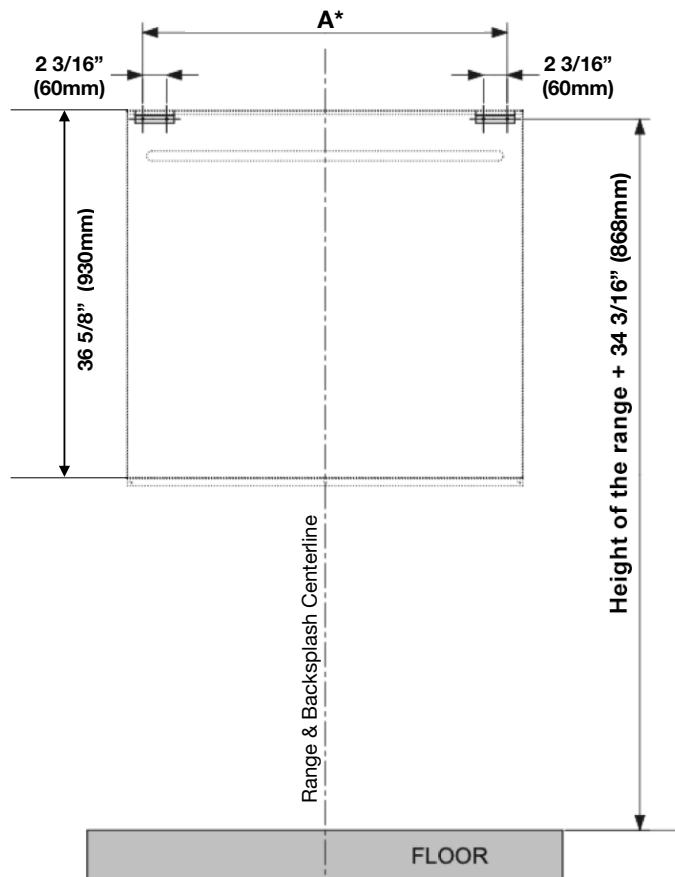

Backsplash Model	700	900	1000	1100	1400	1500	1800	2200
A	24 13/32" (620mm)	32 9/32" (820mm)	36 7/32" (920mm)	40 5/32" (1020mm)	51 31/32" (1320mm)	55 29/32" (1420mm)	67 23/32" (1720mm)	83 15/32" (2120mm)

* Or to the nearest wall stud or framing block



Art Culinaire | Lacanche USA, 1701 1st Street, Snohomish, WA 98290
www.frenchranges.com 1-888-222-2930